



IFC 69 JIFFY BREAK-A-WAY™ TRACK CEILING MOUNTED - INSIDE WINDOW INSTALLATION

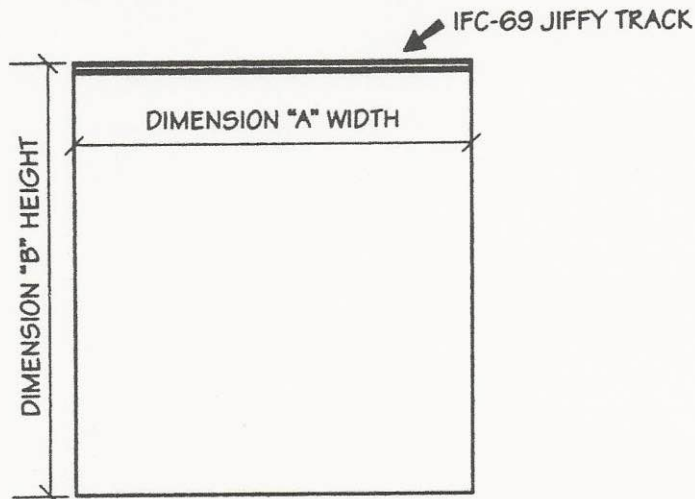

1. TAKE MEASUREMENT "A" INSIDE WINDOW FRAME - LEFT TO RIGHT
 2. TAKE MEASUREMENT "B" INSIDE WINDOW FRAME - TOP TO BOTTOM
- NOTE! FINISHED CURTAIN WILL HANG $\frac{1}{2}$ " ABOVE WINDOW SILL.

IFC 79 JIFFY BREAK-A-WAY™ TRACK WALL MOUNTED ABOVE WINDOW INSTALLATION

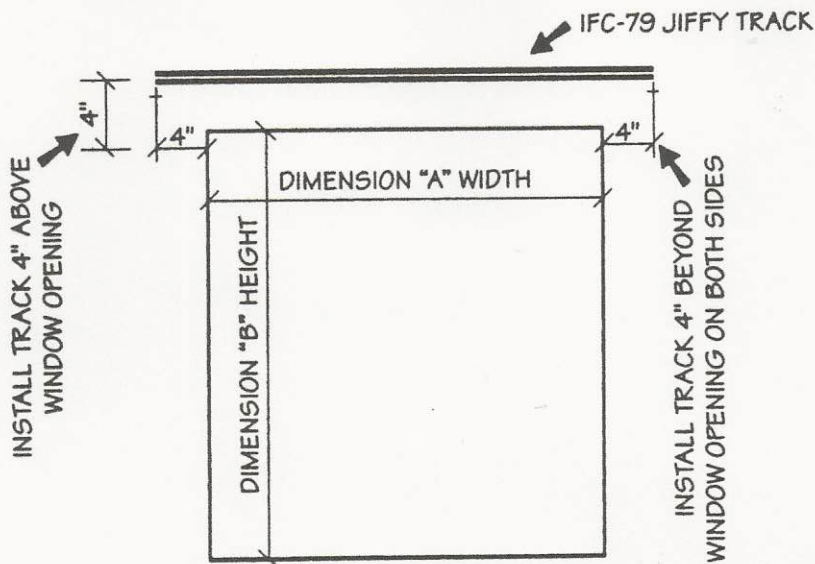

1. TAKE MEASUREMENT "A" INSIDE WINDOW FRAME - LEFT TO RIGHT
 2. TAKE MEASUREMENT "B" INSIDE WINDOW FRAME - TOP TO BOTTOM
- NOTE! FINISHED CURTAIN WILL HANG 4" BELOW WINDOW SILL.

CAPE COD SYSTEMS CORPORATION

PROJECT IFC 69 CEILING MOUNT &
IFC 79 WALL MOUNT INSTRUCTION SHEET

DWG# M 69-79

SCALE NONE