

SafeCare Installation Instructions

Wall Mount - Countersunk Pin-In-Head Torx Fastener

This mount is intended for wall mounting on surfaces such as drywall, wood, plaster, brick or other rough and/or repairable surfaces using silastic or polyurethane construction adhesive and countersunk pin-in-head Torx fasteners.


1. Mark installation location 2" from door frame and 60" above finished floor; for ADA copy to be compliant, the raised lettering and Braille must fall between 48" and 60".
2. Using the sign as a template, position on wall and mark location of holes with pencil.
3. Remove sign and drill 3/16" holes in wall at marked locations.
4. Use the white Alligator anchors provided for a flush, secure installation.
5. Apply adhesive liberally to back of sign per drawing below. 2/90 recommends Loctite Power Grab Clear Construction Adhesive (not supplied by 2/90).
6. Install the sign on wall using bit TR15 Torx with supplied #8 x 1.25 countersunk pin-in-head Torx fasteners.
7. Wipe excess adhesive from around the sign before it dries.

ATTENTION: SafeCare signs are designed specifically for patient-safety. To limit potential risk, follow instructions carefully and use provided hardware only.

NOTE: It is recommended not to use overpowered drills. Overtightening may result in damage to screwhead, frame, and anchor.

If there are any questions regarding installation, please contact 2/90's Technical Support Department at 800.777.4310.

Typical Applications:

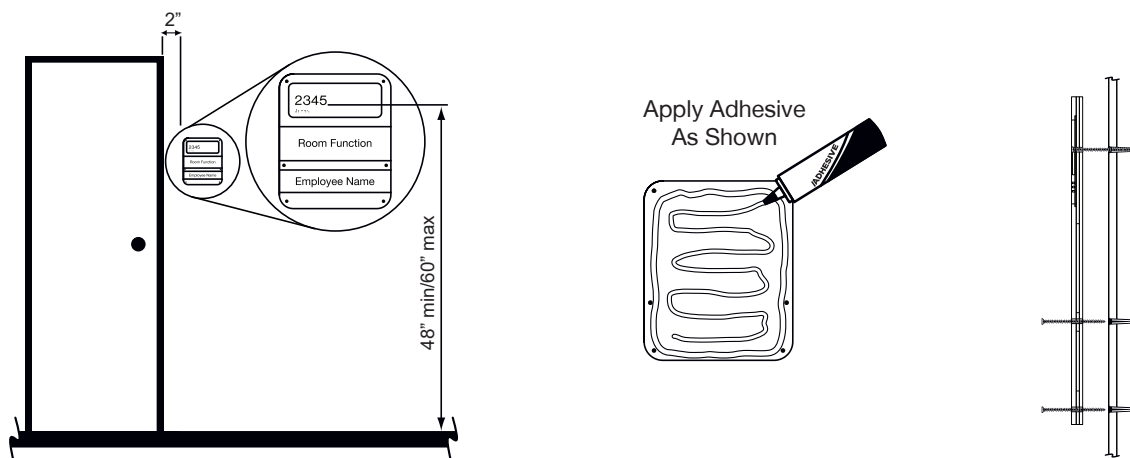

IMPORTANT: Prior to installation, remove all contents from box and inspect each sign for damage. Box should contain signs, hardware, and mounting instructions for each style of mount used. Surface of the sign must be handled with care. Clean with water and mild detergent.

Customer is responsible for suitability of each mounting option. Testing is recommended prior to each use.

1.2021