



Whitehall Manufacturing®
Manufacturer of Healthcare and Rehabilitation Products since 1946

Surgical Scrub Sinks

**CAPE COD SYSTEMS
CORPORATION**
TEL. 1-888-227-8555

Whitehall Compact Surgical Scrub Sink Two Station

Model 4112

Please visit www.whitehallmfg.com
for most current specifications.

Division of
Acorn Engineering Company®



A MEMBER OF



4112

Fixture May Show Some Available Options

Surgical Scrub Sink is designed for use in health care institutions providing surgeons with a convenient sink for pre-op scrub up.

Fixture is fabricated from heavy gage, type 304 stainless steel and is seamless welded construction with a satin finish. The cabinet interior is sound-deadened with a fire-resistant material. The unit is designed to be installed on the wall using a mounting carrier.

Scrub Sink is provided with a front panel which is easily removed for access to the water control valves, waste connections, stops and strainers. Scrub sink has a sloping bottom surface to minimize splashing and a 1-1/2" OD tailpiece with a 3" flat strainer drain.

Backsplash has a gooseneck spout assembly with sprayhead that can be removed for sterilization.

Hands Free Operation includes infrared sensor located on back panel.

T/P Temperature/Pressure Balancing Mixing Valve is located behind the front panel and maintains a constant water temperature. This easily adjustable, anti-scald valve will automatically shut off if the hot or cold water supply fails.

Solenoid Valve is a slow closing, anti-water hammer type.

Optional -MC Mounting Carrier is recommended to provide required fixture support. Refer to Installation Instructions for complete details; verify wall construction and depth as required. Unit weight is 260 lbs.

Optional -EFW Eye/Face Wash provides a Safety Manufacturing™ Model S0660 Series Swing Down Eye-Face Wash within Sink Trough and includes Factory installed Controls® Model ET71-1-BVS-OTG Safety Mixing Valve with Temperature Gauge and Stop Valves.

Models with -EFW Option comply with USP 800, Section 5.3 Eyewash Station Requirements.

GUIDE SPECIFICATION

Provide Whitehall Compact Surgical Scrub Sink (specify model number and options). Fixture shall be fabricated from heavy gage, type 304 stainless steel, with seamless welded construction with a satin finish. Cabinet interior shall have a sound deadening, fire-resistant material. Cabinet shall also have removable access panel to allow access to water control valves, waste connections, stops and strainers. Sink shall have a sloping bottom to minimize splashing, and a 3" flat strainer drain. Gooseneck shall have a removable sprayhead. Fixture shall have a T/P temperature/pressure balancing mixing valve with slow closing, anti-water hammer solenoid valve, infrared sensor and transformer. Transformer must be wired to a GFI protected circuit. Manufacturer shall provide necessary installation instructions.

Please visit www.whitehallmfg.com
for most current specifications.



MGI CONTROLS INSIDE

Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681



BASE MODEL NUMBER

☒ 4112 Compact Surgical Scrub Sink (2 Station)

MOUNTING CARRIER: (Recommended)

☐ -MC Mounting Carrier

**CAPE COD SYSTEMS
CORPORATION**
TEL. 1-888-227-8555


Please visit www.whitehallmfg.com
for most current specifications.

Product Options

- ☐ -EFW Eye/Face Wash (Must Specify Below)
☐ LH Station ☐ RH Station
NOTE: When specified, ET71-1-BVS-OTG
Emergency Mixing Valve will be provided
- ☐ -LFN Laminar Flow Nozzle
☐ -SA Splash Panel
☐ -SWV Swivel Nozzle on Gooseneck



Accessories

An appropriate Chronomite Instantaneous Tankless
Water Heater may be purchased separately to ship
with your scrub sink. Contact your sales rep for details
or visit www.chronomite.com

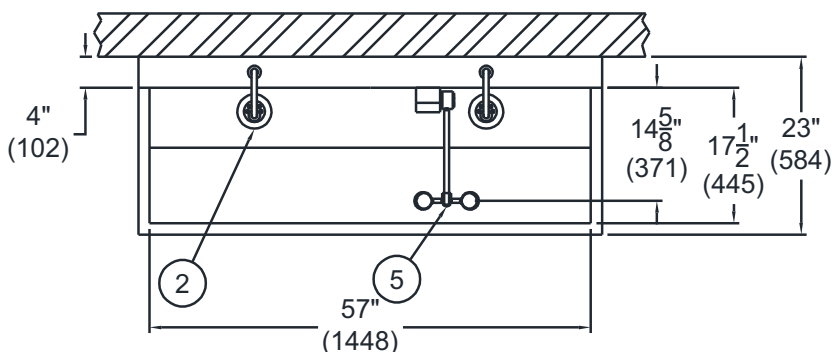

NOTES:

1. Gooseneck Spout Assembly
2. Flat Strainer Drain
3. Removable Access Panel
4. Infrared Sensor
5. Optional -EFW Eye/Face Wash

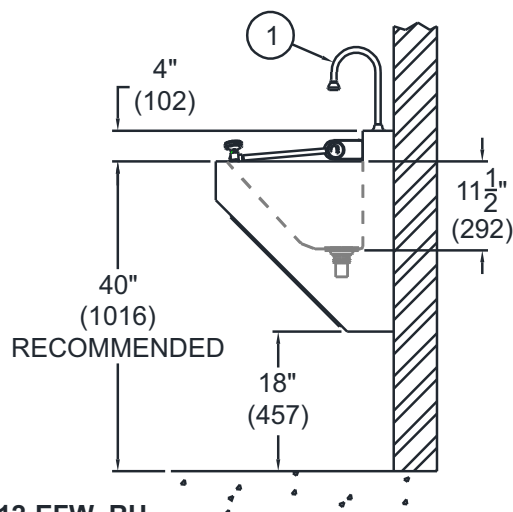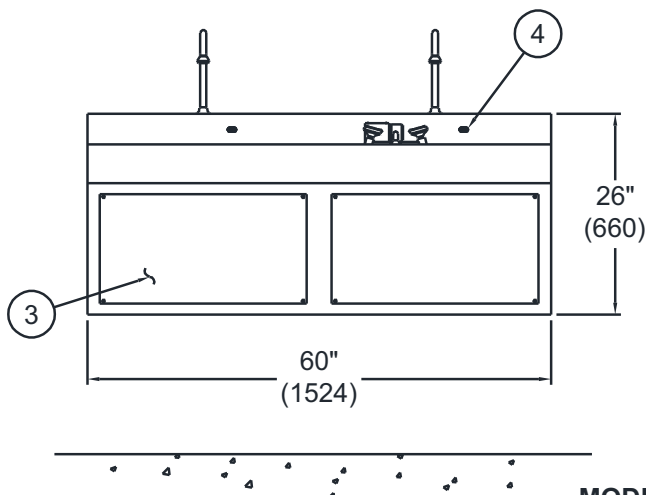

MODEL# 4112-EFW_RH

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

SELECTION SUMMARY & APPROVAL FOR MANUFACTURING

Model Number & Options _____ Quantity _____
Company _____ Date _____
Contact _____ Title _____
Approval for Manufacturing/Signature _____

All dimensions are nominal and subject to
manufacturer's change without notice. Whitehall
assumes no responsibility for use of void or
suspended data. © Whitehall Manufacturing,
Member of Morris Group International.
Please visit www.whitehallmfg.com for most
current specifications.